

 


Technical Bulletin

Thermocouple Replacement Instructions


Models Affected: Gas

1. Shut off gas unit and remove old thermocouple from pilot bracket and safety control.
2. Install new thermocouple in pilot bracket (see illustrations).
3. Connect other end of thermocouple to the control. **CAUTION: DO NOT OVERTIGHTEN.** Tighten only 1/4 turn beyond finger tight. Do not use pipe joint compound.
4. Light pilot burner according to instruction plate on unit. The pilot frame should encircle the tip of thermocouple 3/8 inch. The heated thermocouple tip should never exceed dull red. **NOTE:** Depending on the type of installation, you may not need to all of the fittings provided.




SCREW-IN TYPE

Insert thermocouple into adapter. Slide clip onto thermocouple. Insert thermocouple assembly into pilot and tighten nut on adaptor.

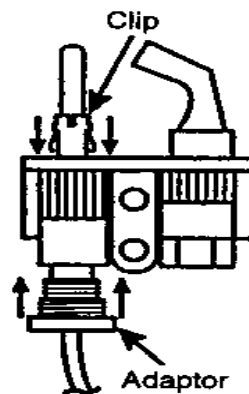


CLAMP TYPE

Clamp adaptor to pilot. Insert thermocouple into adaptor. Slide adaptor onto thermocouple.

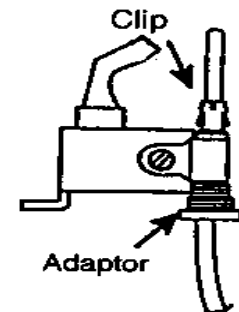

PUSH-IN TYPE

Insert clip into pilot burner. Insert thermocouple into clip.

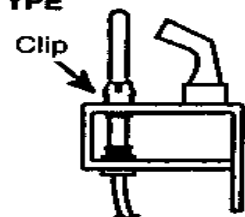

If you have any questions or concerns related to thermocouple replacement, contact our Product Service & Support Department immediately at:

1-800-999-9515